

IIT400-10V High-Precision Current Transducer

IIT400-10V has a high gain and measurement accuracy in the full bandwidth range, due to the application of the multi-point zero-flux technology system and high-frequency ripple sensing channel on top of currently existing DC sensor technology.

The multi-point zero-flux technology system secures the high accuracy by utilizing the technology combination of exciting magnetic flux closed-loop control, self-excited magnetic flux gate and multi-closed-loop control that realizes the closed-loop control between excitation magnetic flux and AC/DC magnetic flux generated by primary current, while the high-frequency ripple sensing channel allows the sensor to have the high performance over the full bandwidth range.

Product photo





Website: www.hangzhiprecision.com

Tel: +86 (0)755 8259 3440





Key Technologies

- ♦ Excitation closed-loop control technology
- ♦ Self-excitation demagnetization technology
- ♦ Multi-point zero-flux technology
- ♦ Temperature control compensation technology
- ♦ Multi-range automatic switching technology

Features

- ♦ Insulated measurement between primary and secondary side
- ♦ Excellent linearity and accuracy
- ♦ Extremely low temperature drift
- ♦ Extremely low zero drift
- ♦ Broad band and low response time
- ♦ Strong anti-electromagnetic interference

Application Domain

- ♦ Medical Equipment: Scanner, MRI
- ♦ Rail Transit: EMU, Metro, Trolly car□
- ♦ Power industry: Converter, Inverter □
- ♦ Ship: Electric driven ship
- \diamond Renewable Energy: Photovoltaic, Wind energy \square \diamond Car: Electric car
- ♦ Testing Instrument: Power analyzer, High-precision power supply
- ♦ Smart Power Grid: Power generation and battery monitoring, Medium low voltage substation

SHENZHEN HANGZHI PRECISION ELECTRONICS CO.,LTD

Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhiprecision.com
Technical Support: support@hangzhiprecision.com
Website: www.hangzhiprecision.com





♦ Industry Control: Industrial motor drive, UPS, Welding, Robot, Hoist, Elevator, Ski lift

Electrical Performance

Parameter	Symbol	Measuring Conditions	Min	Тур	Max	Unit
Primary nominal direct current	I _{PN_DC}	_	_	±400	_	Adc
Primary nominal alternating current*	I _{PN}	_	_	283	_	Aac
Primary overload current	I _{PM}	1 Minute	_	_	±480	Adc
Operating Voltage	Vc	_	±14.2	±15	±15.8	V
Power consumption current	I_{PWR}	Rated primary current	±40	±240	±280	mA
Rated output voltage	U_{PN_DC}	Rated primary voltage (DC)	_	±10	_	V
Conversion ratio	K _N		_	0.025	_	V/A
Output load current			-	<u> </u>	5	mA
Output impedance	R _M		_	_	10	mΩ

^{*} refers to AC effective value

Accuracy Measurement

Parameter	Symb ol	Measuring Conditions	Min	Тур	Max	Unit
Accuracy	X _G	Input direct current, 25±10°C	_	_	0.02	%
Linearity	εL	-	_	_	20	ppm
Zero offset current	lo	@25°C	_	_	±5	uA
Zero offset current	Іот	Full temperature range	_	_	±10	uA
Dynamic response time	tr	di/dt=100A/us, rised to 90%I _{PN}	_	_	1	us



Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhiprecision.com
Tel: +86 (0)755 8259 3440

Technical Support: support@hangzhiprecision.com
Website: www.hangzhiprecision.com





Voltage change rate	di/dt	_	200	_	_	A/us
Frequency bandwidth (-3dB)	F	_	0	_	100	kHz

Safety Characteristics

Parameter	Symbol	Measuring Conditions	Value	Unit
Insulation voltage / Between primary and secondary sides	Vd	50Hz,1min	5	KV
Transient isolation withstand voltage / Between primary and secondary sides	Vw	50us	10	KV
Creepage distance / Between the primary and the outer shell	dCp	_	11	mm
Clearance distance / Between the primary and the outer shell	dCi	_	11	mm
Comparative tracking index	CTI	IEC-60112	600	V

General Characteristics

Parameter	Symbol	Measuring Conditions	Min	Тур	Max	Unit
Ambient operating temperature	TA	_	-40	_	+85	°C
Ambient storage temperature	Ts	_	-55	_	+95	°C
Relative humidity	RH	-	20	_	80	%
Mass	М	_		735±60		g

Indicator light description of transducer

♦ Normal status:

The green indicator light is on when the device is running normally: After the device is powered on, the green indicator light will be on when the device is working normally.

SHENZHEN HANGZHI PRECISION ELECTRONICS CO.,LTD

Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R.

Email: sales@hangzhiprecision.com Technical Support: support@hangzhiprecision.com

Tel: +86 (0)755 8259 3440 Website: www.hangzhiprecision.com





♦ Fault status:

The green light will not be off when the transducer is in fault mode.

Trouble-shooting:

- a) When the green light is off, the power supply should be checked as the first step;
- b) If the power supply is normal, then the primary current is over the specified measurement range and the transducers will be in overload mode.

In this mode, the transducers will be working in non-zeroflux mode, that the secondary current remains at specified maximum output, the secondary voltage and primary currents are not in proportion.

Indicator light instruction of voltage converter box

- In normal operation, the green light of the voltage converter box is always on:
 After the device is powered on, the indicator light of the voltage converter box is always on.
- ♦ When the power supply is abnormal, the green light will be off.

Website: www.hangzhiprecision.com

Connection and Instruction

1. Phoenix terminal pin function definition

Pin No.	Definition	Instruction	Interface drawing		
1	+15V Supply	Power supply +15V	1		
2	-15V Supply	Power supply -15V			
3	N.C	Disconnected			
4	GND	Ground			

2. Phoenix terminal definition






Pin No.	Definition	Instruction	Interface drawing
1	N.C	Disconnected	
2	N.C	Disconnected	
3	N.C	Disconnected	
4	N.C	Disconnected	HHHHH
5	Vout-	Voltage Output -	1 6
6	Vout+	Voltage Output +	

Usage

Use the following steps, and refer to the figure below.

- Step 1: Provide ±15VDC power supply, and connect to the input interface of the power supply.
- Step 2: The indicator light of transducer should be on, and the indicator light of power supply should be on.
- Step 3: Pass the current cable through the transducer aperture, and pay attention to the current direction.
- Step 4: The voltage output interface is connected to the voltage measuring instrument or AD sampling circuit, and pay attention that the load current should not be too large.

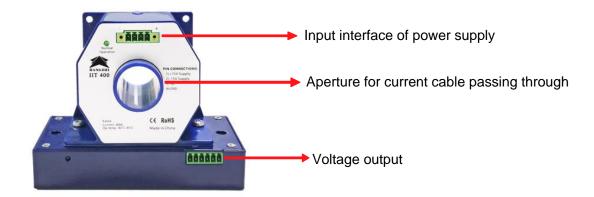







Attention in usage


- Voltage output port load should be more than $3k\Omega$, and load current is less than 5mA.
- The positive and negative terminals of the voltage output ports shall not be short-circuited.
- 3. The power input is ± 15 VDC ± 1 %, and the current is at least ± 0.5 A.

Dimensions

Unit: mm

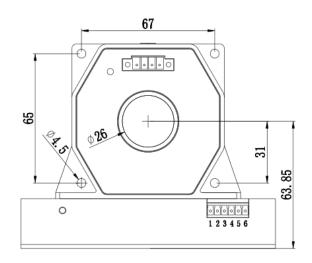

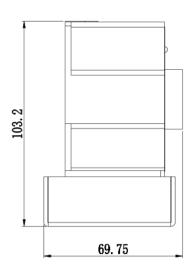

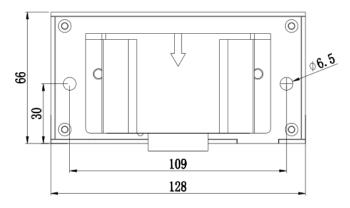

Website: www.hangzhiprecision.com

