

IIT6000 Industrial-Grade Current Transducer

IIT6000 has a high gain and measurement accuracy in the full bandwidth range, due to the application of the multi-point zero-flux technology system and high-frequency ripple sensing channel on top of currently existing DC sensor technology.

The multi-point zero-flux technology system secures the high accuracy by utilizing the technology combination of exciting magnetic flux closed-loop control, self-excited magnetic flux gate and multi-closed-loop control that realizes the closed-loop control between excitation magnetic flux and AC/DC magnetic flux generated by primary current, while the high-frequency ripple sensing channel allows the sensor to have the high performance over the full bandwidth range.

Product photo




SHENZHEN HANGZHI PRECISION ELECTRONICS CO., LTD







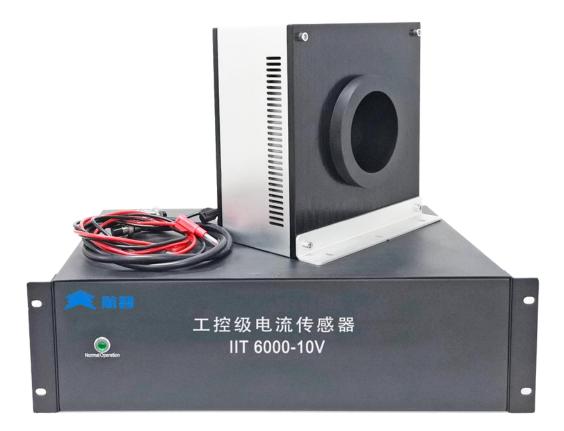

Key Technologies

- Excitation closed-loop control technology
- Self-excitation demagnetization technology
- ♦ Multi-point zero-flux technology
- \diamond Temperature control compensation technology
- \diamond Multi-range automatic switching technology

Features

- \diamond Insulated measurement between primary and secondary side
- Excellent linearity and accuracy
- ♦ Extremely low temperature drift
- ♦ Extremely low zero drift

♦ Ship: Electric driven ship

- ♦ Broad band and low response time
- ♦ Strong anti-electromagnetic interference

♦ Rail Transit: EMU, Metro, Trolly car□

Application Domain

- ♦ Medical Equipment: Scanner, MRI
- \diamond Power industry: Converter, Inverter \square
- \diamond Renewable Energy: Photovoltaic, Wind energy \Box \diamond Car: Electric car
- ♦ Testing Instrument: Power analyzer, High-precision power supply

SHENZHEN HANGZHI PRECISION ELECTRONICS CO., LTD

Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R. Email: <u>sales@hangzhiprecision.com</u> Tel: +86 (0)755 8259 3440 Technical Support: Website: www.har

Technical Support: support@hangzhiprecision.com Website: www.hangzhiprecision.com





- ♦ Smart Power Grid: Power generation and battery monitoring, Medium low voltage substation
- ♦ Industry Control: Industrial motor drive, UPS, Welding, Robot, Hoist, Elevator, Ski lift

Electrical Performance

Parameter	Symbol	Measuring Conditions	Min	Тур	Max	Unit
Primary nominal direct current	IPN_DC	—	—	±6000	—	Adc
Primary nominal alternating current*	IPN	—	—	4243	—	Aac
Primary overload current	IPM	—	—	—	±6600	Adc
Operating voltage	Vc	—	—	220	—	Vac
Current ratio	K _N	Input : Output	6000:1	6000:1	6000:1	—
Rated output current	I _{SN}	Rated Primary current		±1.0		А
Secondary burden resistance	Rм		0	1	1.5	Ω

* refers to AC effective value

Accuracy Measurement

Parameter	Symbol	Measuring Conditions	Min	Тур	Мах	Unit
Accuracy	X _G	Input direct current, full temperature range	—	—	0.02	%
Linearity	٤L	Full temperature range	—	_	50	ppm
Zero offset current	Іот	@25°C	—	—	±5	μA
Zero offset current	lo	Full temperature range	_	_	±10	μA
Response time	tr	di/dt=100A/us, rised to 90%I _{PN}	—	—	1	us
Current change rate	di/dt		200	_	_	A/us

SHENZHEN HANGZHI PRECISION ELECTRONICS CO., LTD

Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park,

Baoyuan Rd, Bao'an District, Shenzhen, China P.R.Email: sales@hangzhiprecision.comTechnicalTel: +86 (0)755 8259 3440Website:

Technical Support: support@hangzhiprecision.com Website: www.hangzhiprecision.com





Frequency bandwidth	F	—	0	_	100	kHz
(-3dB)						

Safety Characteristics

Parameter	Symbol	Measuring Conditions	Value	Unit
Insulation voltage / Between primary and secondary sides	Vd	50Hz,1min	5	KV
Transient isolation withstand voltage / Between primary and secondary sides	Vw	50us	10	KV
Creepage distance / Between the primary and the outer shell	dCp	—	11	mm
Clearance distance / Between the primary and the outer shell	dCi	—	11	mm
Comparative tracking index	CTI	IEC-60112	600	V

General Characteristics

Т					
IA	_	-40	_	+85	°C
М	—		27300±1000		g
	М	м —	м —	M – 27300±1000	M – 27300±1000

Operating Status Instructions

♦ Normal status:

The green light indicator is on when the device is running normally:

After the device is powered on, the green indicator is on when the device is running normally. When the green light is off, you should check whether the power supply of the transducer is normal as the first step.

SHENZHEN HANGZHI PRECISION ELECTRONICS CO.,LTD Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R. Email: Sales@hangzhinrecision.com Technical Support: Support

Email: sales@hangzhiprecision.comTechnical Support: support@hangzhiprecision.comTel: +86 (0)755 8259 3440Website: www.hangzhiprecision.com





♦ Fault status:

The green light is blinking when the current overloads. Trouble-shooting:

If the power supply is normal, the green light indicator keeps on blinking, then the primary current is over the specified measurement range and the transducer will be in overload mode. In this mode, the transducer will be working in non-zeroflux mode, the secondary and primary currents are not in proportion. When the current recovers to the specified measurement current range, the current transducer returns to normal, green light indicator will be on.

Instructions

The steps are as follows:

Step 1: Connect the transducer and the control box through a dedicated connection line.

Step 2: Insert the AC 220V power plug into the control box and turn on the power supply switch Step 3: Pass the current cable to be tested through the transducer and pay attention to the current direction.

Step 4: The current output interface is connected to the current measuring instrument or current sampling circuit. Note that the sampling resistance value cannot exceed the maximum limit value.

Connection System

1. Control box power supply wiring:

The power interface of the control box is directly connected to the 220V power supply;

Red terminal: the positive side of the secondary current output;

Black terminal: the negative side of the secondary current output;

2. Connection of control box and winding coil

Insert the D-Sub9 male connector on the winding coil directly into the D-Sub9 female connector of the control box and fix it with screws.

3. Test description:

By measuring the test current I_s flowing through R_M , or the voltage U_R across R_M , The primary current I_P can be obtained:

 $I_P = K_N * I_S = K_N * (U_R / R_M)$

Dimensions

SHENZHEN HANGZHI PRECISION ELECTRONICS CO., LTD


Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park, Baoyuan Rd, Bao'an District, Shenzhen, China P.R. Email: <u>sales@hangzhiprecision.com</u> Technical Support: Tel: +86 (0)755 8259 3440 Website: www.har

China P.K. Technical Support: <u>support@hangzhiprecision.com</u> Website: www.hangzhiprecision.com





Unit: mm

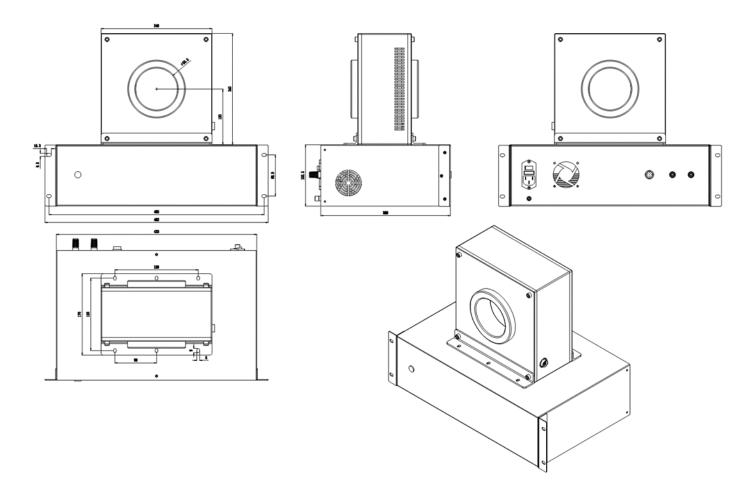

SHENZHEN HANGZHI PRECISION ELECTRONICS CO., LTD

Add: Rm 531, Building B, Huayuan Hi-Tech Innovation Park,
Baoyuan Rd, Bao'an District, Shenzhen, China P.R.Email: sales@hangzhiprecision.comTechnical Support: support@hangzhiprecision.comTechnical Support: support@hangzhiprecision.comTechnical Support: support@hangzhiprecision.comTechnical Support: support@hangzhiprecision.comTechnical Support: support@hangzhiprecision.com

